

## D Mode CT Addendum

This document includes important information regarding corrections and additional information to the User Guide included with your DM1000 series Dual Mode Communication Terminal (D-Mode CT). Please read carefully and retain this addendum sheet for future reference.

### Battery Backup

If you have installed 5 AA alkaline batteries in the Power Backup battery compartment, the battery power activates when power from the AC adaptor is cut off. Simply unplugging the AC adaptor does not disconnect power to the phone. To completely disconnect all power from the phone, such as when removing or replacing a SIM card, remove at least one battery from the battery compartment.

The **Battery Level** indicator accessible from the base menu screen is valid only with five alkaline batteries installed (see "Power Backup" on page 33 and 34 of your User Guide). This indicator may not display the appropriate condition if batteries are not installed.

### Set the ringer volume (page 9)

Ringing volume can not be adjusted while the phone is ringing.




### Pause (Page 14)


The **REDIAL/P** key on the base and handset can be used to add a two second pause while entering a phone number (shown on screen as the letter "P"). The pause is added as the digits are transmitted when dialing.

Pause is available ONLY on TEL (landline) calls.

### Enter Names and Characters (Page 18)

When entering names, press **Clear** to erase a character. **FLASH/DEL** is not used for erasing characters.

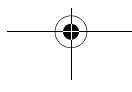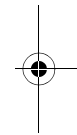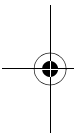

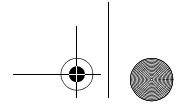

## Short Message Service

### CHECK MEMORY STATUS (PAGE 24)

As part of the SMS feature, DM1000 series lets you check the storage capacity of the SMS message memory by following the instructions in Check Memory Status.

- 1 Press **MENU**, scroll to **Messages**, and press **Select**.
- 2 **Scroll to SMS, and press Select.**
- 3 Scroll to **Storage Status**, and press **Select**.  
**Memory Status** appears.

### Page (pages 28 and 29)

Page can be activated by pressing the **INTERCOM** key on the base or on the cordless handset.




#### PAGE 28


The page feature lets you locate the handset if it is misplaced, but it also can be answered by the handset. *Page can be initiated by either the base or the cordless handset.*

#### PAGE 29

3. Press **Exit** to stop the page without connecting to the ***paging party (the base or the handset)*** through intercom.

Paging ALL cordless handsets can ONLY BE INITIATED FROM THE BASE. When all cordless handsets are paged, the page cannot be answered by any of the handsets.

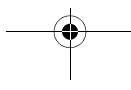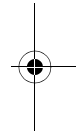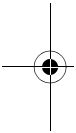

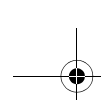

## Cellular Only (page 33)

“Cellular Only” is a unique feature which allows multiple cordless handsets to join the conversation while calling on the cellular service. This feature is only available when “Cellular Only” is activated according to the procedures mentioned in the User Guide. The steps to turn off this feature and to enable the use of TEL (PSTN) landline should be corrected as follows:

- 1 Press **MENU**, scroll to **Setup**, and press **Select**.
- 2 Scroll to **Cellular Only**, and press **Select**.
- 3 Scroll to **Off**, and press **Select**.  
A tone confirms the choice, and the **Setup** menu appears.  
Press **Exit** or **OFF** to return to the Standby mode.
- 4 Connect the telephone cord.

