

4

D Mode CT Keys

SELECTION KEYS

Press these keys to access the phone menus, phone book, and to select and activate features. The key function changes depending on which feature you are using.

SCROLL KEYS

Use the scroll keys to scroll up or down through menus, the Caller ID log, messages, and other information.

NUMBER AND FUNCTION KEYS

Use the number keys to enter phone numbers (when dialing), letters (when entering names in the phone book or writing messages). Use the function keys for features such as Flash, Redial, and Speakerphone.

For details, see the user guide.

For all the details, see the user guide

Chapter 2
 Dialing mode
 Time and date
 Set the ringer tone
 Key beep
 Area codes
 Language
 LCD Contrast
 Name
 Handset registration

Chapter 3
 Make a Wireless call
 Make a Landline call
 Calling options
 Answer a wireless call
 Answer a landline call
 In-Call Operations
 Phone book
 Messages

Chapter 4
 Caller ID
 Page and Intercom
 Two-line calling
 Barge-in
 Cellular only
 Power back-up

Waxess, Inc.
 34 Executive Park, Suite 250
 Irvine California, 92614
HF1000US008

3

Ready the Cordless Handset

CHARGE THE BATTERY

Find the cordless handset adaptor, Model number AD35-0904. Connect the AC adaptor to the smaller jack on the charger and to a standard 120V AC wall outlet.

Set the charger on a desk or table, then set the handset in the charger with the keypad facing forward.

Allow the battery to charge for 12 - 15 hours.

A power indicator in the upper right corner of the LCD shows how much battery life remains.

Full charge
 Low charge

5

Make a call

WIRELESS CALL

Cordless Handset	Speakerphone on Base	Corded Handset on Base
Press CEL Enter number Press CEL again OR Enter number Press CEL	Enter number Press CEL	Lift handset Enter number Press CEL
To end the call, press OFF	To end the call, press SP-PHONE	To end the call, replace the handset

LANDLINE CALL

Cordless Handset	Speakerphone on Base	Corded Handset on Base
Press TEL Enter number Press TEL again OR Enter number Press TEL	Enter number Press TEL	Lift handset Enter number Press TEL
To end the call, press OFF	To end the call, press SP-PHONE	To end the call, replace the handset

2

Ready the Cordless Handset

INSTALL THE BATTERY

Open the cover

Connect the battery

Close the cover

POWER ON

When powered on for the first time, the base goes through an initialization sequence. **Do not use the phone until the initialization sequence is complete.**

When the sequence is complete, the Standby Screen appears. This screen appears on both the base and the handset, and is always visible when the phone is idle. At the bottom of the screen, the text indicates which service lines are active. CEL is wireless service, and TEL is landline service.

BASIC CALLS

6

CEL or TEL call with Speakerphone

CEL or TEL call with Corded Handset

CEL or TEL call with Cordless Handset

Continued on back

1

Set up the Base

INSTALL THE SIM CARD

Open the cover

Insert the SIM card, beveled corner facing right, contact area facing down, then close the cover

CHOOSE LOCATION

Wall mount

Desk or Table

D Mode CT Phone DM1000/DMS1000

All-in-one wireless and landline communications device.

www.waxess.com

Quick Reference Guide